

16" X 20" BRICK PIER



035

BUILD THE PIER
AS SHOWN

ALL JOINTS ARE TO
BE CONCAVE TOOLED

THE FIRST BED JOINT
MAY BE USED TO LEVEL
THE PROJECT

Use a modular rule. Brick spacing
to be 3 courses in 8". (#6)

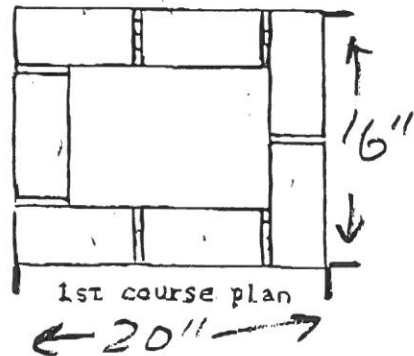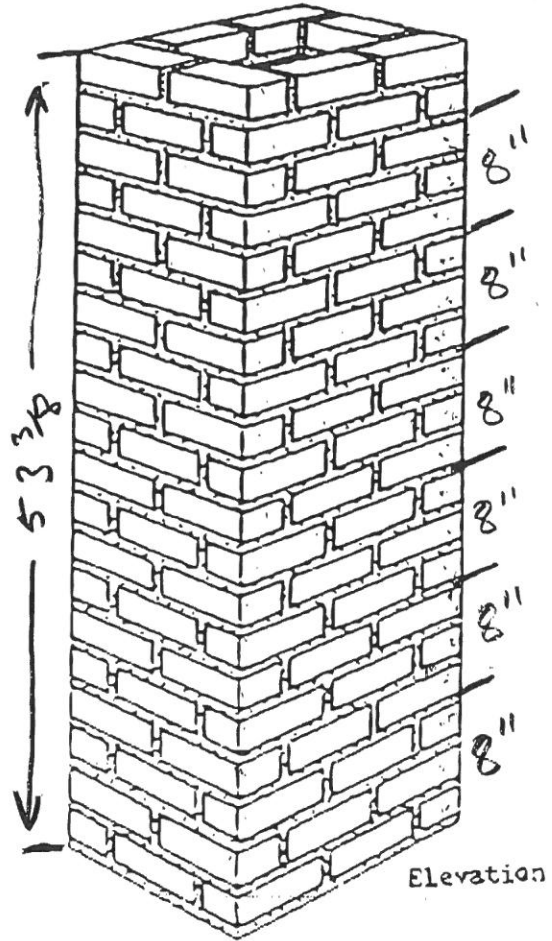

16" X 20" BRICK PIER

035

BUILD THE PIER
AS SHOWN

ALL JOINTS ARE TO
BE CONCAVE TOOLED

THE FIRST BED JOINT
MAY BE USED TO LEVEL
THE PROJECT

Use a modular rule. Brick spacing
to be 3 courses in 8". (#6)

